



SAFETY SYSTEMS

FIRST TIME SETUP GUIDE

AXGX4K Dash Camera



 


CONGRATULATIONS

AXGX4K Dash Camera

Congratulations on the purchase of your new AXGX4K Dash Camera. This document is designed to help you set up and use this device with ease. Keep this in the car or a safe spot, for easy reference if required.

Take a quick look over the diagrams below to get a better understanding of managing video files from the Dash Camera.

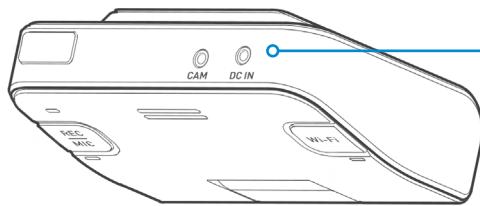

Please ensure your dash camera is plugged in to be operational.
FOR SUPPORT CALL 1800 818 288

HOW TO INSERT THE MICRO SD CARD

1. Slide the power switch and lock to OFF to unlock it.
2. Check the insertion direction of the Micro SD card.
3. Insert the Micro SD card until it makes a 'click' sound.
4. Slide the power switch and lock to ON to lock it.

HOW TO REMOVE THE MICRO SD CARD

1. Slide the power switch and lock to OFF to unlock it.
2. Press the inserted Micro SD card until it clicks.
3. When the Micro SD card pops out, take it out by hand.

TIPS

- The power switch and lock is a device that turns the power ON/OFF and prevents the Micro SD card from being pulled out at the same time.
- **Please make sure to use a genuine memory card. If a non-genuine memory card is used, compatibility and normal operation cannot be guaranteed. Carefully observe the direction in which the Micro SD card is inserted.**
- **If the Micro SD card is inserted incorrectly, the memory card slot of the product or the Micro SD card may be damaged.**
- Please regularly back up important videos to a separate storage device.

ANDROID GUIDE

 


For connecting an AXGX4K Dash Camera via the App with Android device.

INSTRUCTIONS

STEP 1

Search and download the Fine-Vu WiFi App from the Play Store.

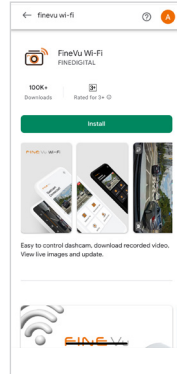


STEP 2

Once installed, ensure the vehicle ignition is 'on' and have your engine running whilst proceeding this setup.

STEP 3

 Press the Wi-Fi button on the AXGX4K camera. You will hear a voice notification "connect FineVu WiFi".

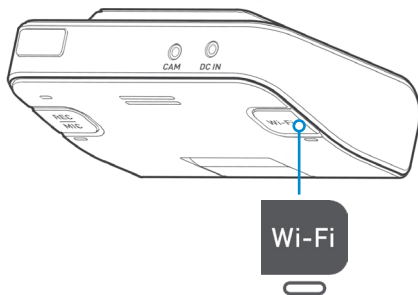

STEP 4

Click on the "+ Connect Dashcam" button to register your camera to your app. Your phone will now begin to search for your AXGX4K camera automatically. Once found, press on the camera name at the bottom of your phone's screen.



STEP 5

Your phone will now automatically connect to your dash camera. You may see a pop up asking to "connect to device". Click 'connect'.

Once connection is complete, you can access, save or send footage and personalise the settings.

TROUBLESHOOTING:

If you are unable to connect with the auto Wi-Fi connection within the app, go into the phone settings then connect to the **FineVu_GX4K** Wi-Fi manually using password: **12345678**

- If you are having trouble connecting to the app, first check your permission settings are enabled and then try re-starting the phone.

IMPORTANT NOTES:

If the SD card needs to be removed from or reinserted into the device, ensure dash camera is powered off first.

- Most essential settings are pre-set prior to, or during installation such as time zone and low voltage cut-off. Please do not change the camera settings. Refer to the installer for details.
- If you have a vehicle with Wireless Android Auto/Apple CarPlay please disconnect before connecting to the dash camera.
- Your dash camera will provide you with the following voice notifications:

VOICE NOTIFICATION	EXPLANATION
Records in parking mode.	Engine off – camera will begin parking mode.
Driving mode to start recording. Safe driving.	Engine on – camera will begin driving mode.
Impact occurred during parking.	Impact has been sensed during parking mode. This could be an impact to the vehicle or from the vehicle's door being closed.
System shut down to protect the battery.	Car parked. Camera will automatically turn off after voltage drops below set value.

TO RECONNECT LATER, PRESS THE WIFI BUTTON.

Please refer to your User Manual for more in depth information.

FOR FURTHER SUPPORT CALL 1800 818 288

iOS GUIDE

 
 


For connecting an AXGX4K Dash Camera via the App with iOS.

INSTRUCTIONS

STEP 1

Search and download the FineVu Wi-Fi App from the App Store.

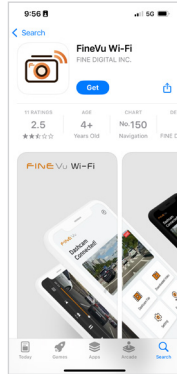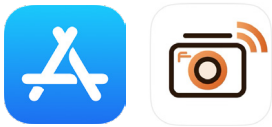

STEP 2

 
Once installed, close the app store. Now ensure the vehicle ignition is 'on' and have your engine running whilst proceeding with this setup.

STEP 3

Press the Wi-Fi button on the AXGX4K camera. You will hear a voice notification: "connect FineVu Wifi".

STEP 4

Navigate to the phone settings and turn on Wi-Fi. In the Wi-Fi list, select the name that starts with **FineVu_****AXGX4K**. Enter password: **12345678**

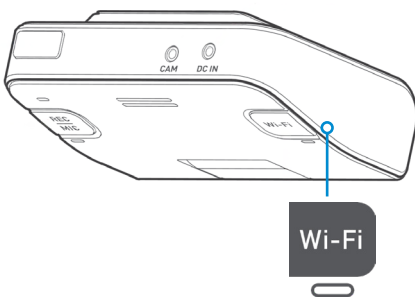

TO RECONNECT LATER, PRESS THE WIFI BUTTON.

STEP 4

Click on the "+ Connect Dashcam" button to register your camera to your app. Your phone will now begin to search for your AXGX4K camera automatically. Once found, press on the camera name at the bottom of your phone's screen.



TROUBLESHOOTING:

If you are unable to connect with the auto Wi-Fi connection within the app, go into the phone settings then connect to the **FineVu_GX4K** Wi-Fi manually using password: **12345678**

- If you are having trouble connecting to the app, first check your permission settings are enabled and then try re-starting the phone.

IMPORTANT NOTES:

If the SD card needs to be removed or reinserted into the device, ensure dash camera is powered off first.

- Some essential settings are pre-set prior to, or during installation such as time zone and low voltage cut-off. Please refer to your reseller for details.
- Your dash camera will provide you with the following voice notifications:

VOICE NOTIFICATION	EXPLANATION
Parking mode ON	Engine Off - Camera will begin Impact Detection Mode
Starting Video Recording	Engine On - Camera will begin Impact Detection Mode
Impact detection recorded	An impact has been sensed during parking mode. This could be an impact to the vehicle, or from simply a door being closed setting off an impact.

Please refer to your User Manual for more in depth information.

FOR FURTHER SUPPORT CALL 1800 818 288